

Quick Installation Guide

for

Inkjet Industrial Inline Printer

Bentsai E61P Series




Content

1.Product Diagram	3
1.1 Backside Diagram	3
1.2 Frontside Diagram	3
1.3 Mounting Holes Diagram	4
2. Printer Installation Instructions	5
2.1 Downward Printing Installation	5
2.2 Sideward Printing Installation	5
3. Printhead Panel Replacement	6
3.1 Printhead Panel Remove	6
3.2 Printhead Panel Instllation	6
4.Bracket Installation	7
4.1 Bracket Installation Reference (Sideward Printing)	7
4.2 Bracket Installation Reference (Downward Printing)	7
5. Printer Installation Reference	8
5.1 Downward Printing Installation Reference	8
5.2 Sideward Printing Installtion Reference	8




1.Product Diagram


1.1Backside Diagram

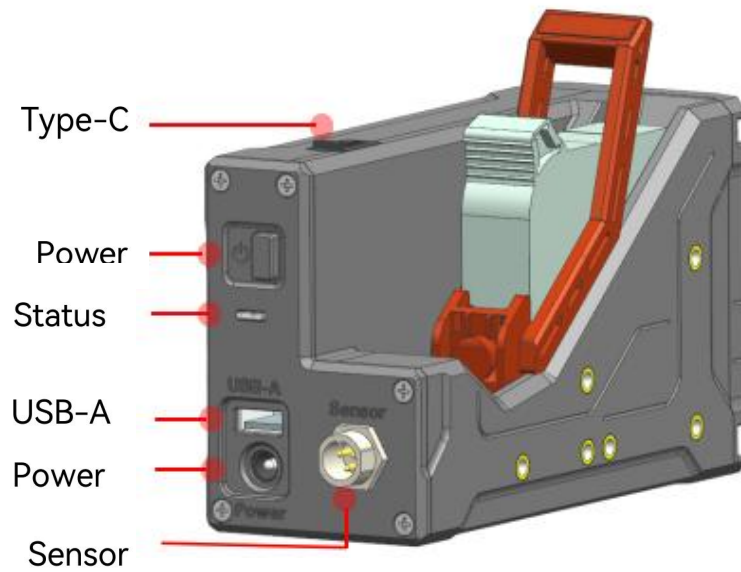

1.2Frontside Diagram

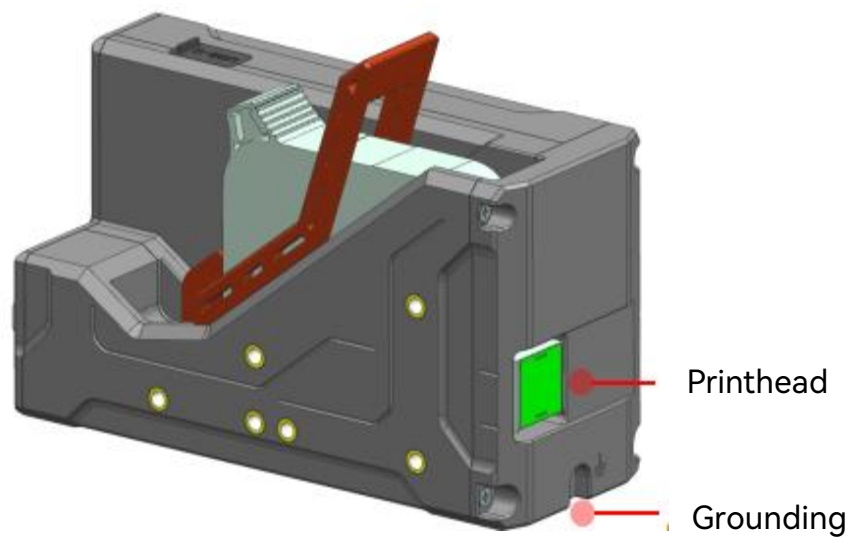

1.3 Mounting Holes Diagram

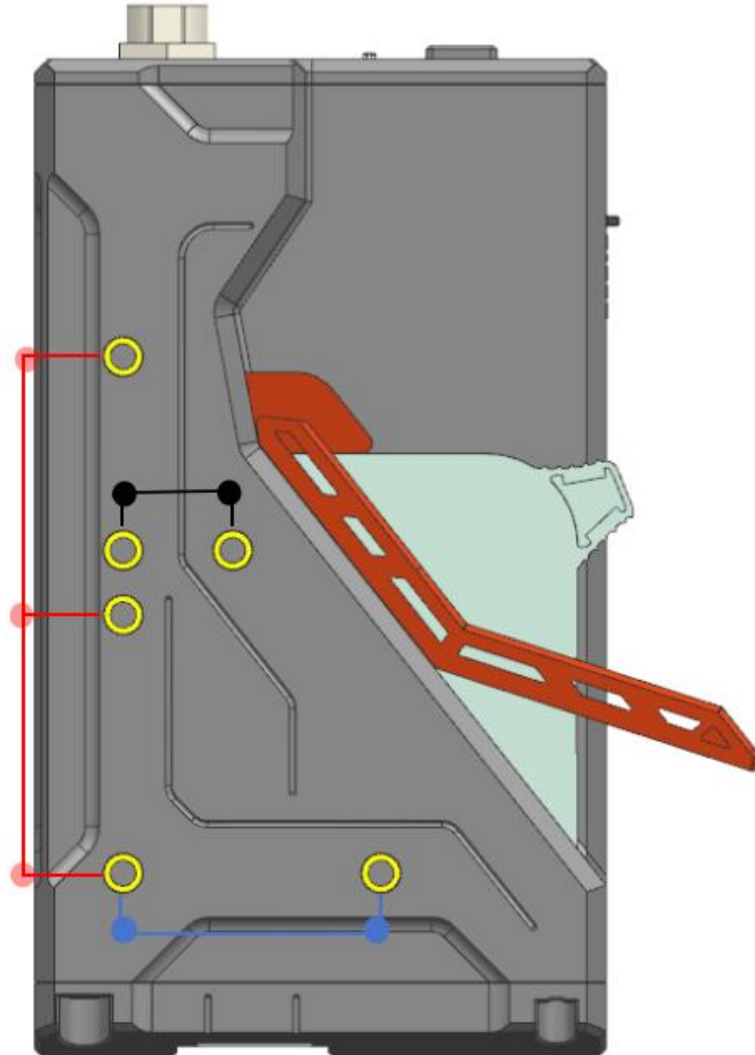

Red marked Holes: Printer Mount Base Holes (Downward Printing)

Blue marked Holes: Printer Mount Base Holes(Sideward Printing)


Black Marked Holes: X-Y Fine Tuning Module Mounting Holes.



2. Printer Installation Instructions


2.1 Downward Printing Installation

Use 2 pcs M4*16 screws to lock
printer mount base as shown for downward
printing.

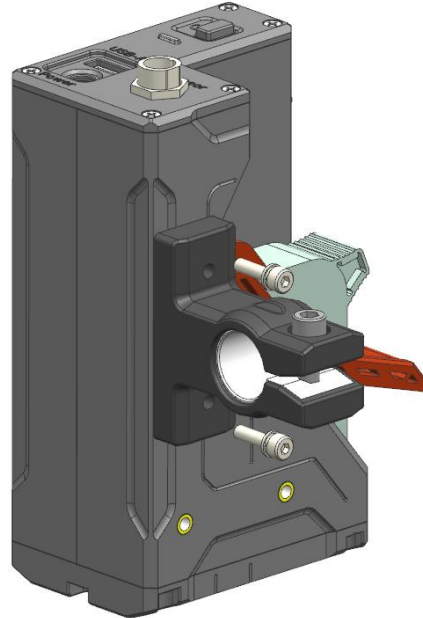

2.2 Sideward Printing Installation

Printer mount base as shown for sideward
printing.

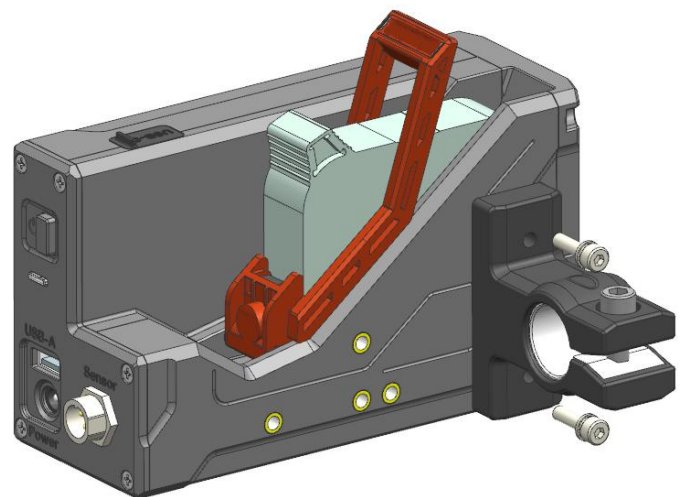


3. Printhead Panel Replacement


3.1 Printhead Panel Remove

1. Remove the front panel by unscrewing the 4 PCS M2.5*8 screws;
2. Replace with the new panel and screw it securely.

Note: Please shut down the printer before replacing the panel.

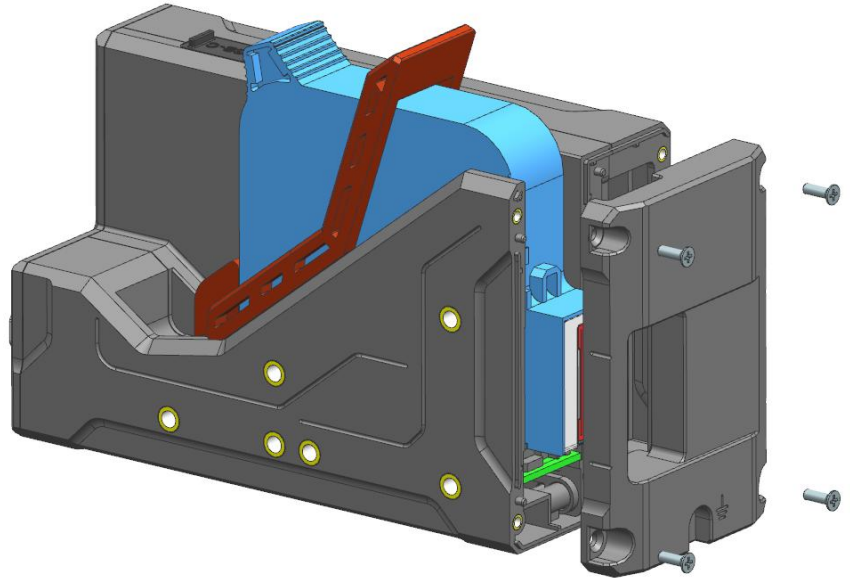

3.2 Printhead Panel Installation

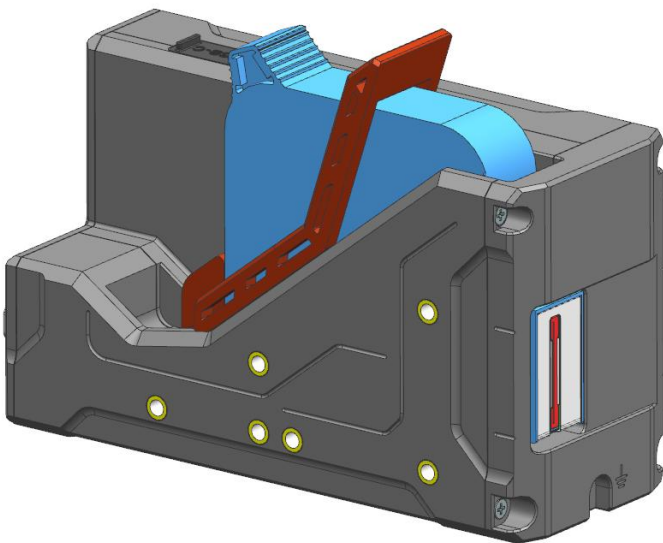

4. Bracket Installation

4.1 Bracket Installation Reference (Sideward Printing)




4.2 Bracket Installation Reference (Downward Printing)



5. Printer Installation Reference

5.1 Downward Printing Installation Reference

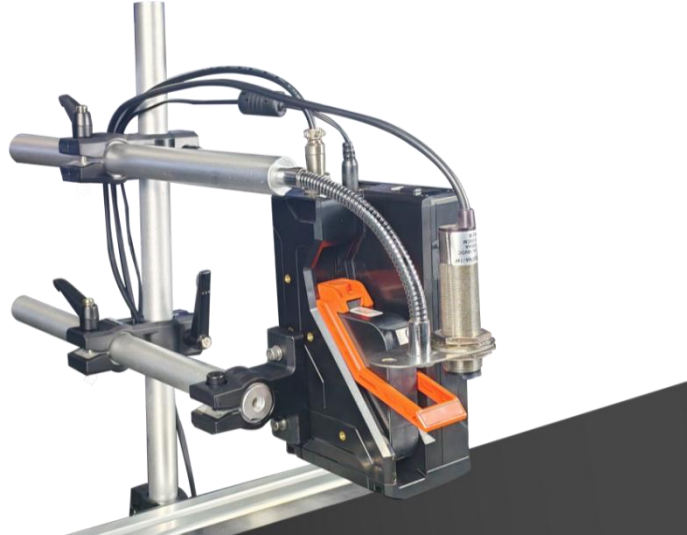

5.2 Sideward Printing Installation Reference

